

A DIRECT HEALTHCARE GROUP COMPANY

Bure Standard Bure S Bure Low

Technical Manual



BURE STANDARD/BURE S/BURE LOW

Bure Standard Bure S Bure Low

Contents

1. Parts list	04
2. Spare parts	06
3. Accessories	07
4. Other instructions - Linak	07
5. Other instructions - T-Motion	08
6. General maintenance advice	09
7. Safety instructions	09
8. ID label	09
9. Recycling/Scrapping	10
10. Warranty	10
11. Dimensions	10

1. Parts list

- 1 A Armrest
 - B Knob
 - C Plastic washer
 - D Washer, black
- 2 D Handle & grip E Clamp
 - F Knob

3 Upper frame

- 4 G Chromium-plated tube H Attachment bolt (2 pcs) I Serrated washer
 - J End bushing
- 5 K Frame 10 A L Sleeve guide B

- M Protective cover N Bolts
- O Wheel frame
 - P End bushing
 - Q Wheel
- R Bolt

6


7


8


9

Е

- S Washer
- T Nut
- U Serrated washer
- Locking handle, height adjustment
- A Gas strut
- B Handle
- C Arm/housing
- D Bolt, washer (2 pcs), nut (attachment at bottom and top)
- A Battery shelf & attachment boltsB Battery & nut/ bolt (for
 - attachment to battery shelf) Control box (Linak/TiMotion)
- C Control box (Linak/TiMotion) D Remote control (Linak/TiMotion)
 - Actuator (Linak/TiMotion)

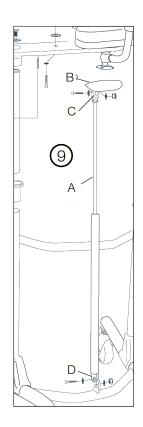

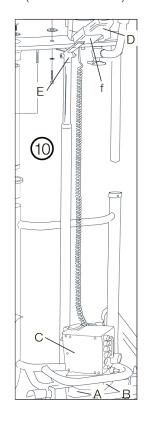

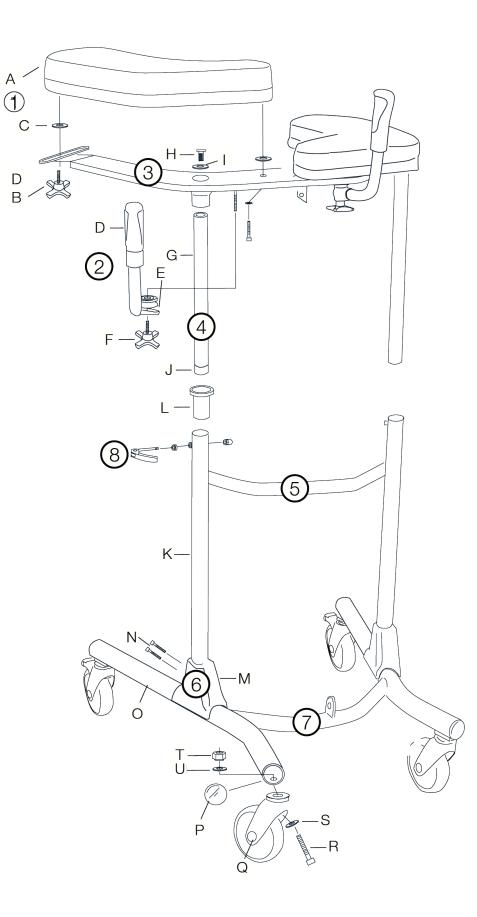

2. Reservdelar

 - 56-305 Touch-up paint Bure, Silver 8 10F 56-328 Holder, hand controller (EL only) L 56-340 Guide sleeve G 56-341 Standard guide tube/chrome 9B/C 56-342 Plastic handle Bure GAS (GAS only) J 56-343 End piece, guide tube P 56-344 End piece, lower frame, Black/D45 10B 56-346 Linak - Battery incl. circuit board (EL, LA28 only) 10B 58-317 T-Motion - Battery 10E 56-349-1 Linak- Actuator (raise/lower) (EL, LA31 only)
L56-340Guide sleeveG56-341Standard guide tube/chrome9B/C56-342Plastic handle Bure GAS (GAS only)J56-343End piece, guide tubeP56-344End piece, lower frame, Black/D4510B56-346Linak - Battery incl. circuit board (EL, LA28 only)10B58-317T-Motion - Battery10E56-349Linak- Actuator (raise/lower) (EL, LA28 only)
G56-341Standard guide tube/chrome9B/C56-342Plastic handle Bure GAS (GAS only)J56-343End piece, guide tubeP56-344End piece, lower frame, Black/D4510B56-346Linak - Battery incl. circuit board (EL, LA28 only)10B58-317T-Motion - Battery10E56-349Linak- Actuator (raise/lower) (EL, LA28 only)
9B/C56-342Plastic handle Bure GAS (GAS only)J56-343End piece, guide tubeP56-344End piece, lower frame, Black/D4510B56-346Linak - Battery incl. circuit board (EL, LA28 only)10B56-346-1Linak- Battery (EL, LA31 only)10B58-317T-Motion - Battery10E56-349Linak- Actuator (raise/lower) (EL, LA28 only)
J56-343End piece, guide tubeP56-344End piece, lower frame, Black/D4510B56-346Linak - Battery incl. circuit board (EL, LA28 only)10B56-346-1Linak- Battery (EL, LA31 only)10B58-317T-Motion - Battery10E56-349Linak- Actuator (raise/lower) (EL, LA28 only)
P56-344End piece, lower frame, Black/D4510B56-346Linak - Battery incl. circuit board (EL, LA28 only)10B56-346-1Linak- Battery (EL, LA31 only)10B58-317T-Motion - Battery10E56-349Linak- Actuator (raise/lower) (EL, LA28 only)
10B56-346Linak - Battery incl. circuit board (EL, LA28 only)10B56-346-1Linak- Battery (EL, LA31 only)10B58-317T-Motion - Battery10E56-349Linak- Actuator (raise/lower) (EL, LA28 only)
10B56-346-1Linak- Battery (EL, LA31 only)10B58-317T-Motion - Battery10E56-349Linak- Actuator (raise/lower) (EL, LA28 only)
10B58-317T-Motion - Battery10E56-349Linak- Actuator (raise/lower) (EL, LA28 only)
10E 56-349 Linak- Actuator (raise/lower) (EL, LA28 only)
10E 56.240.1 Lipple Actuator (raise lower) (ELLAS1 aph)
10E 56-349-1 Linak- Actuator (raise/lower) (EL, LA31 only)
10E 58-315 T-Motion- Actuator (raise/lower)
10C 56-345-1 Linak- Control box 220 V (EL, LA31 only)
10C 58-316 T-Motion- Control box 220 V
10A 56-351 Battery shelf Std (EL only)
O 57-300 Lower frame, Bure Std
O 57-300-2 Lower frame, Bure S
2 56-353 Handle kit, Bure Std (2 pairs incl. lock knob/clamps)
- 56-357 Wheel without brake 100 mm
- 56-358 Wheel with brake 100 mm
- 56-360 Wheel without brake 125 mm
- 56-387 Wheel with brake 75 mm
Q 56-361 Wheel with brake 125 mm
8 56-362 Lock lever, manual height adjustment
8 56-362-1 Lock lever, clamp, bolt for manual height adjustment
2F 56-363 Knob for adjusting handle
1B 56-364 Knob for adj. width of armrest plates
1A 56-366 Armrest, right, Bure Standard/S
1A 56-367 Armrest, left, Bure Standard/S
10D 56-370 Linak - Hand control 2channel (raise/lower), (EL, LA28 only)
10D 56-370-1 Linak- Hand control (raise/lower), (EL, LA31 only
10D 58-318 T-Motion- Hand control (raise/lower)
- 56-374 Linak- battery charger (EL, LA28 only)
M 56-375 Protective cover, plastic, Bure Standard
- 57-009-1 Coiled cable
- 58-326 T-Motion- Coiled cable
1C 57-904 Washer, nylon
1D 57-918 Washer, black

3. Tillbehör


Art. Nr.	Beskrivning
56-326-0	Handbrake kit/2 handles
56-326-1	Handbrake kit, one-handed brake
56-327	Frame elevation kit 70 mm
56-330	Gas strut kit 150N incl. attachment/lever
56-368	Gas strut 150N (gas strut only)
56-381	Gas strut kit 200N incl. attachment/lever
56-331	Stirrup
56-332	Linak - Electric motor kit incl. remote control, battery shelf (MANUAL, GAS only)
56-333	Footplate, Bure Standard (plate)
56-333-1	Platform short
56-383	Platform long
56-334	Drip holder
56-335	Attachment for drip holder
56-336	Oxygen holder
56-337	Side support, adjustable
56-338	Drip rod complete with attachment
56-389	Soft basket with attachment, Bure Standard/S

4. Other instructions - Linak

Control box wiring

- 1. Battery terminal socket
- 2. Plug socket
- (NOTE: Plugs must always be connected to the control box for IP classification to be valid.) 3. Remote control socket
- 4. Socket for the raise/lower actuator

NOTE: Make sure that the plus are connected to the correct sockets otherwise the actuators may be damaged

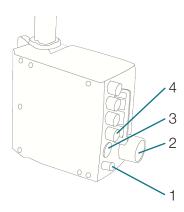

Battery charging

Battery charging must take place when the walker is not in use (the battery can never be overcharged). Charging is carried out by inserting the plug in a wall socket.

The battery should be charged at least 24 hours before first use.



5. Other instructions T-Motion

Control box wiring diagram

To handle couplings as below, the control box cover must be removed. This is done with the help of a screwdriver or similar - see special marking on the control box.

- 1. Socket for the raise/lower actuator. NOTE! Make sure that the connectors are connected to the correct socket as this can otherwise damage actuators
- 2. Remote control socket
- 3. Battery terminal socket
- 4. Plug socker (NOTE: Plugs must always be connected to the control box for IP classification to be valid).



Laddning av batteri

- Plus in to 230V wall socket. Charging starts automatically and the battery LED blinks green.
- Charge the battery for at least 8 hours.
- If the product will not be used for an extended period of time (more than 3 weeks), we recommend that the battery is removed from the control box. In this way, the risk of the battery being destroyed, as the control box consumes a small amount of power even the when product is not used, is eliminated.

• LED on controlbox and battery

Control box - green light when power is available from battery/mains socket.

Battery:

- The LED flashes green during charging.
- ON/OFF: To use the product, press ON.
- The green lamp will begin to flash.
- Use the OFF button (hold down for 5 s) to switch off the battery if the product will not be used for an extended period.
- The LED will shows a constant green light when the battery is fully charged.
- When the battery is in normal state/in operation, the LED flashes green at REGULAR intervals, namely 0.5 s ON, 4 s OFF.
- When the battery requires charging (remaining charge <25%) the LED will flash orange/red at REGULAR intervals, namely 0.5 s ON, 4 s OFF.

NOTE: The battery has an in-built device that automatically switches it off when remaining charge is <20%. The LED is then extinguished. The battery must now be fully charged before the electronics can be used again.

6. General maintenance advice

- Wipe the walker and its armrests clean as necessary; use soap solution/surface disinfectant.
- The product may be cleaned in a tunnel washer or similar as electrical systems have IP65 protection. However, the product is not corrosion proof which means washing by machine may reduce its lifetime.
- Replace damaged parts immediately; must be done by experienced personnel.
- The product is only intended for indoor use

7. Safety instructions

The Bure Walker may only be used:

- As a WALKING AID, indoors
- On HARD, LEVEL surfaces.

MAX USER WEIGHT: 150 KG

8. ID-märkning

- 1. Part number
- 2. Product name
- 3. Date of manufacture
- 4. Max user weight
- 5. Serial number
- 6. EAN code



9. Recycling/Scrapping

When the product is no longer usable it should be recycled in accordance with legislation and regulations in the country concerned. All electrical parts including batteries must be removed and recycled as electrical components. (Ask your local recycling station for further information about how the different materials in the product (metals, plastics, electronics) should be recycled).

10. Warranty

We provide two years' warranty for manufacturing faults (does not apply to wear parts). For further information or enquiries please contact:


Gate Rehab Development AB Industrigatan 2, S-330 21 Reftele tel 0371-318 00 info@gaterd.se



11. Dimensions

	MANUAL	GAS	EL
Product weight	13kg	15kg	21kg
Product height	91-133cm	91-129cm	21-131cm

"LIFT" denotes suitable handhold for lifting the walker NOTE: At least two people are required for lifting.

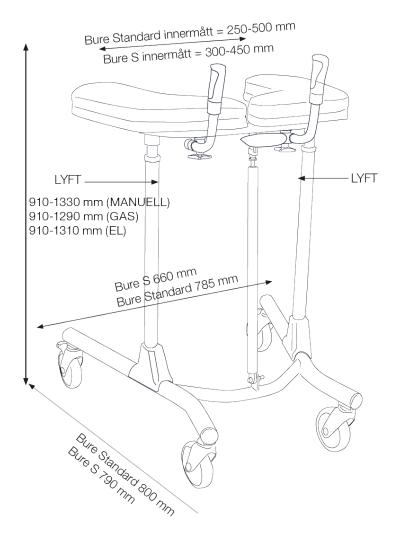



A DIRECT HEALTHCARE GROUP COMPANY

Gate Rehab Development AB Industrigatan 2 Reftele, Sverige S-330 21

T: 0371-318 00 F: 0371-318 01 E: info@gaterd.se

LIT-00098 Issue 1 Date: January 2020

GATERD.SE